




Black and Decker BV2500 Type 4 Power Cord Replacement

Replacing the damaged or missing power cord for the Black and Decker BV2500 Type 4.

Written By: Angelica Chow

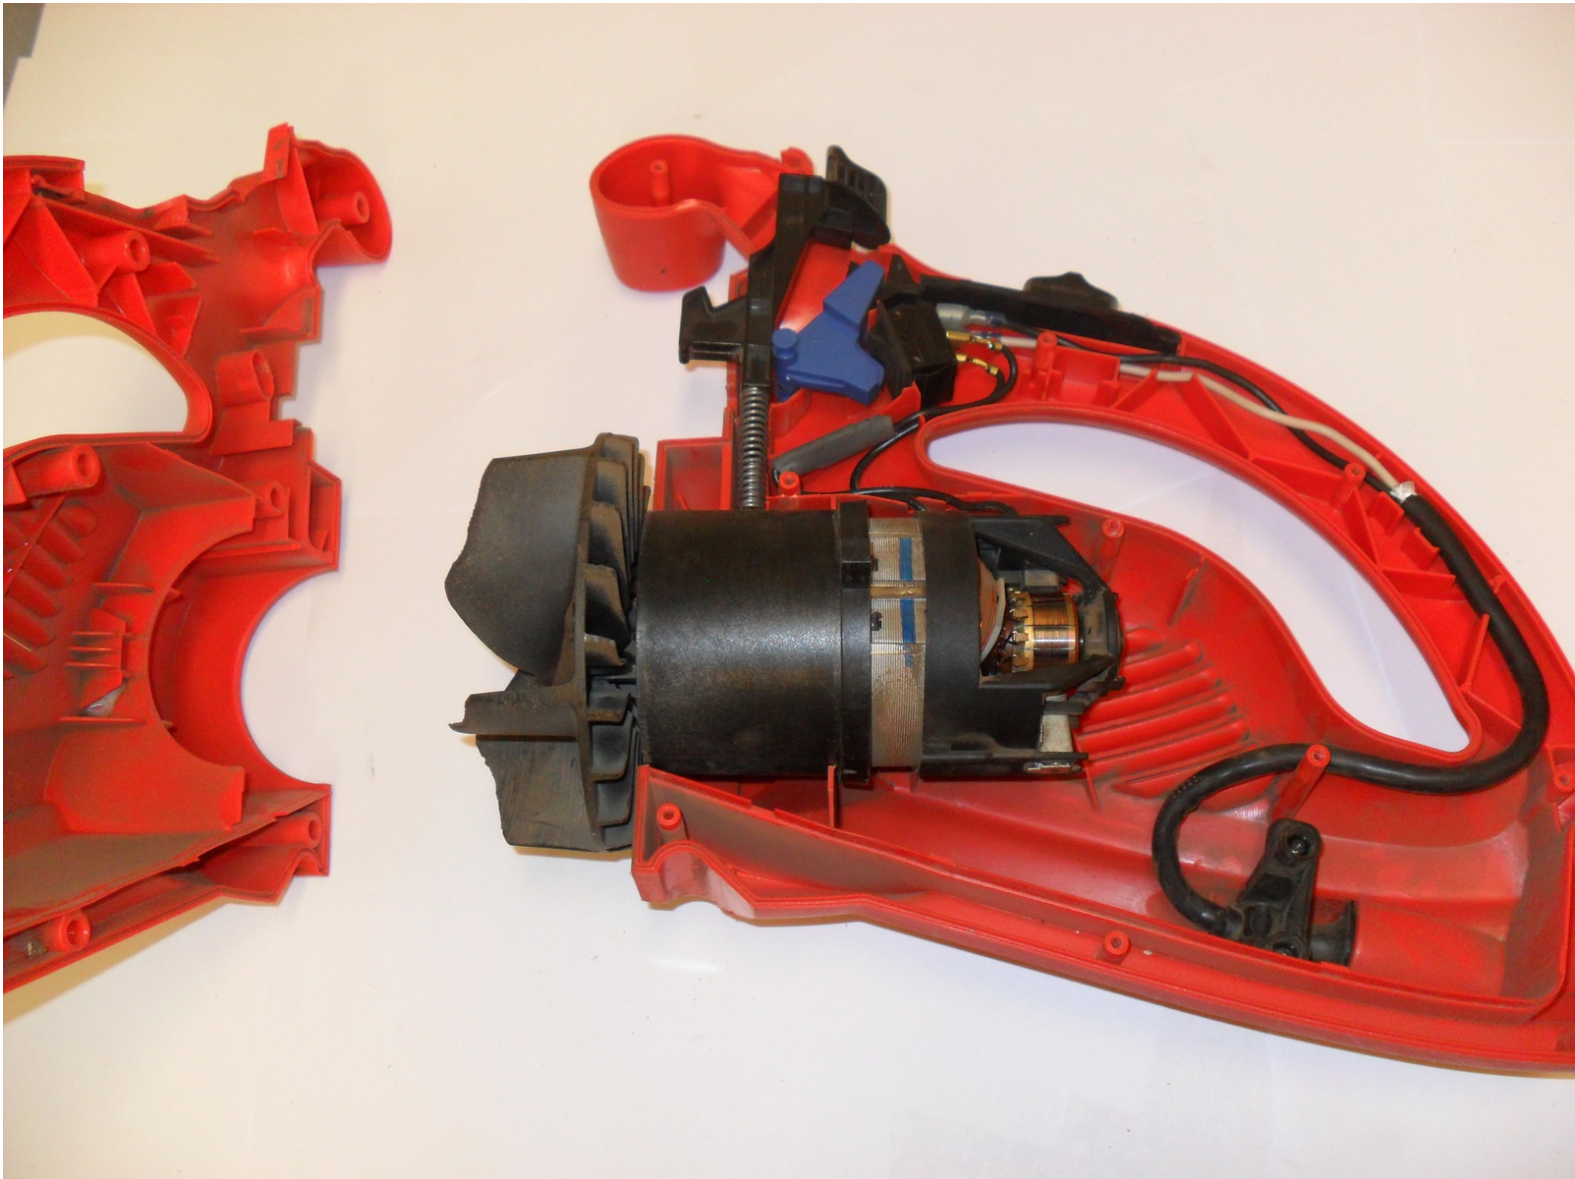

INTRODUCTION

This guide will take you through the process of replacing the power cord on the Black and Decker BV2500 Type 4. Without a power cord that works, the device will not turn on.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)



PARTS:

- [DeWALT or Black Decker Power Cord 330074-03](#) (1)

Step 1 — Clamshell (Black Outer Casing)

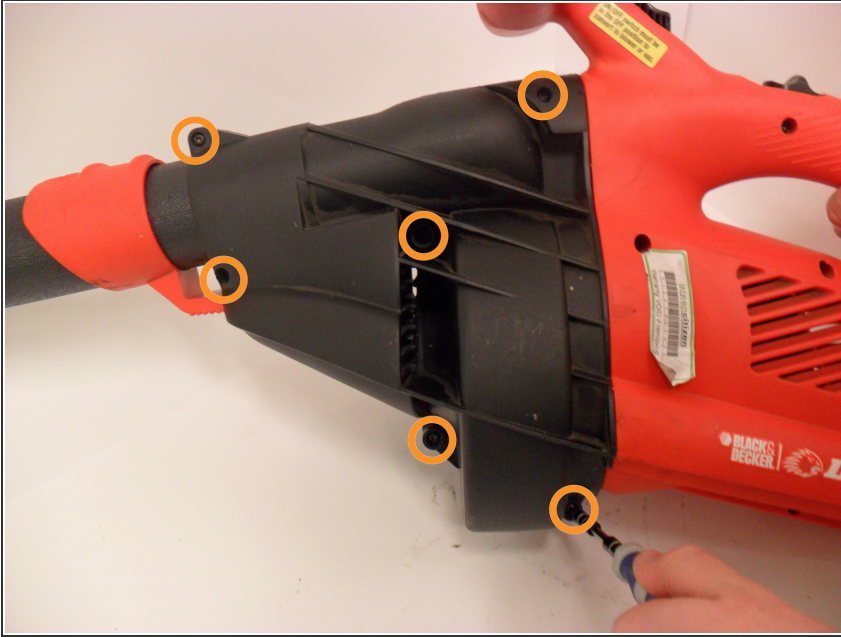

- Locate and unscrew the six 20 mm Phillips #2 screws in the black plastic casing (clamshell) with a Phillips #2 screwdriver.

Step 2





- Using your hands, remove the blower tube and clamshell.
 - To remove the clamshell, pull apart starting from the bottom until it is pulled out from the notches. Then slide it out away from the device.

Step 3 — Power Cord




- Locate and unscrew the ten 20 mm Phillips #2 screws in the orange casing with a Phillips #2 screwdriver.
- Use your hands to lift off the side of the orange casing with the screws facing you.

Step 4

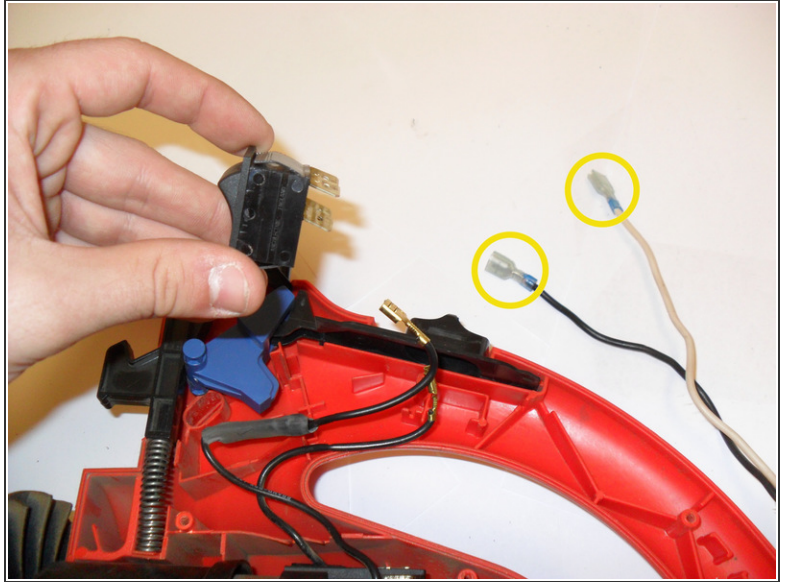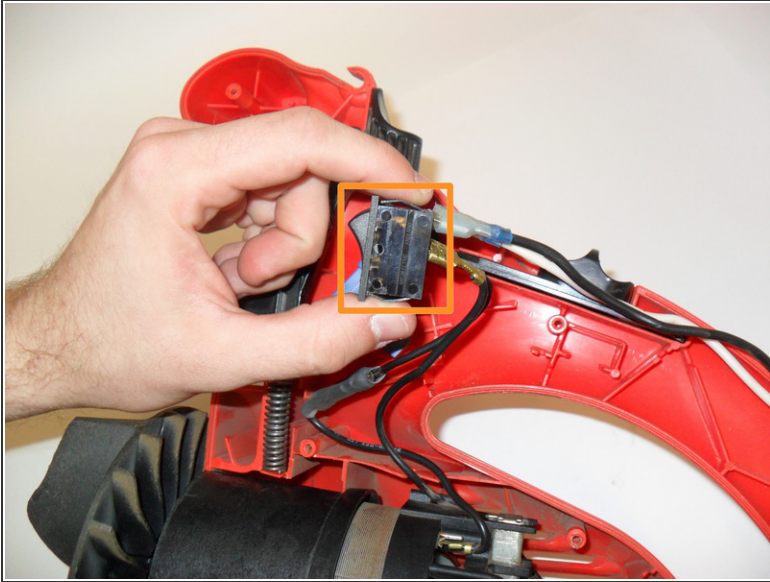



- Locate the switch.
- Remove the 2 black and white wires with blue casings from the switch.
 - Using your hands, push in the sides of the switch and slide out the wires.

Step 5

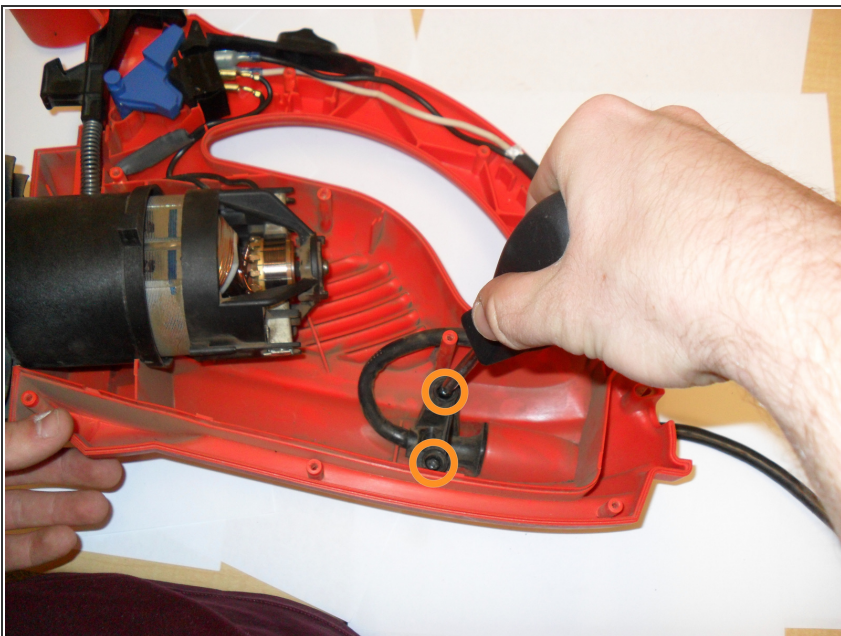

- Unscrew the two 20 mm Phillips #2 screws that are holding in the power cord (located at the bottom of the leaf hog) with a Phillips #2 screwdriver.

Step 6

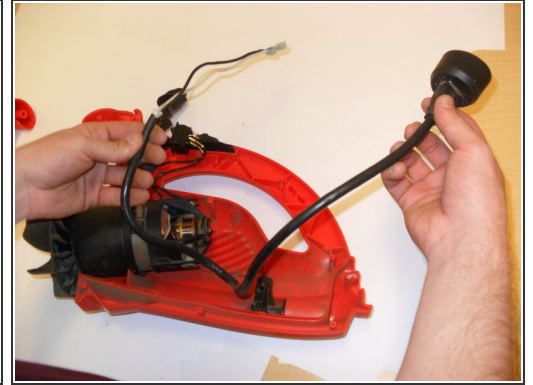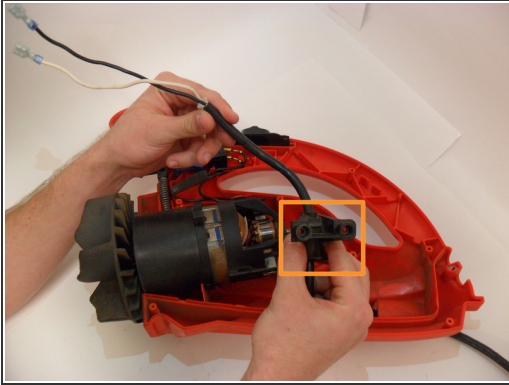

- Slide the power cord support off the power cord in the direction of the leads.
- Use your hands to pull the power cord out of the device with the lead end coming out last.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 12:41:08 PM.